



WallboxPlayer – Spotify

www.wallboxplayer.com

JAN 2025 – V3.0

The WallboxPlayer is a device that turns your wallbox into a music player. This QuickStart manual provides basic instructions on how to install and operate the WallboxPlayer with **the Spotify option**. For complete instructions and options, refer to the full manual. In case you have any questions, contact me anytime.

WallboxPlayer Features

- Have your wallbox play your favorite music with or without a jukebox
- Song queue and/or random play
- Wireless/remote control capabilities
- Audio (3.5mm jack) and 2 speaker outputs, optional Spotify

This addendum describes the Spotify features. It is assumed the WallboxPlayer has been installed and set up in a wallbox. The WallboxPlayer requires a 2nd SD card option and needs to have the short antenna installed for good WiFi reception.

1 General Description

The WallboxPlayer supports a range of wallboxes. Music is stored on a microSD card and can be filled matching the wallbox titles or can be selected from a **Spotify Playlist**.

The WallboxPlayer board has an on-board MP3 player that accepts a user-filled microSD card. It has a jack plug for headphones or external audio. The board has a second microSD for supporting functions. Spotify is optional and requires the optional WiFi /remote App capabilities. There are buttons for HW reset on the microprocessor and 'Select' to do the setup, cancel or add a play. All settings are done in the setup through software and stored.



2 Installation of Spotify

2.1 Spotify Account

1. Sign into the Spotify Developer page: <https://developer.spotify.com/dashboard> (and select dashboard from your user).
2. Create a new application and name it whatever you want, e.g. WallboxPlayerSpotify
3. Note the ClientID and clientSecret from these pages and fill in the callback URL for your computer (e.g. <http://192.168.1.224/callback/> (note http works better than https)).
4. You will need to use the "client ID" and "client secret" from this page in your sketches



The screenshot shows the Spotify for Developers dashboard for the 'WallboxPlayerSpotify' app. The 'Basic Information' tab is selected, showing fields for Client ID, App Status, App name, App description, Website, Redirect URIs, Bundle IDs, Android packages, and APIs used. The Client ID is 4dbaf0a259b5428cad06194c2abcb574 and the App Status is Development mode. The App name is WallboxPlayerSpotify, the App description is Spotify for WallboxPlayer, and the Redirect URIs include http://192.168.1.224/callback/. The APIs used are Web API and Web Playback SDK. An 'Edit' button is at the bottom.

2.2 Setting the configuration file

The configuration SD card has a configuration text-file (JSON). Use a text or JSON editor to edit **CONFIG.JSON**. Numbers and text values between brackets can be changed. Please ensure the JSON consistency remains. The **CONFIG.JSON** file should be as follows with your Spotify credentials and token correctly filled in. At this point if you have a token (131 characters), you can fill it in.

2.2.1 Using the WallboxPlayer for a Token

If you do not have the token, leave it empty and **follow the next steps** if you want to generate this token using the WallboxPlayer, otherwise skip these steps.

1. Press onboard setup button for at least 5 seconds and release
2. Do not press any button until you get to "Tools"
3. Press the setup button a few times (5x) until you see SPOTIFYSETUP
4. The system will now tell you to use the browser to connect to your WallboxPlayer
5. Now quickly (within the timeout of 60 seconds) connect to the IP address of your player (e.g. http://192.168.1.215/)
6. The page should show a text link saying "[Spotify Auth](#)", click this link and then the long token will appear.
7. Copy this token (should be 131 characters) and use this for the configuration file below. Latest versions of the WallboxPlayer save this key back into the config file on the SD card.

Fill in your settings and Spotify credentials (note the settings are also saved on the WallboxPlayer memory once entered).



```
{
  "Wallbox_in": 5,
  "Jukebox_out" or "Player_out": 23,
  "Autoplay_mode": 0,
  "Volume": 19,
  "Equalizer": 5,
  "Control_relay": 0,
  "Pulse_adjust": 100,
  "Autoplay_number": 200,
  "This_device_name": "WBplayer_21",
  "This_device_ip": "192.168.1.215",
  "Network": "YOUR_WIFI_SSID",
  "Password": "YOUR_WIFI_PASSWORD",
  "Receiver_name": "",
  "Receiver_ip": "",
  "Blynk_token": "",
  "Spotify_token": "YOUR_131_CHARACTER_TOKEN_SHOULD_BE_FILLED_IN_HERE",
  "Spotify_id": "YOUR_32_CHARACTER_CLIENTID_HERE",
  "Spotify_secret": "YOUR_32_CHARACTER_CLIENTSECRET_HERE",
  "Spotify_playlist": "YOUR_SPOTIFYPLAYLIST_HERE",
  "Spotify_defaultlist": "YOUR_DEFAULT_SPOTIFYPLAYLIST_HERE ",
  "//Comment0": "// End of configuration - below is notes, not read",
  "//Comment1": "// Use number [0,1] for y/n settings",
  "//Comment2": "// Wallbox values Set to 1=MP3player to play songs",
  "//Comment3": "// Wallbox/Jukebox values Seeburg 2=3W1 3=3W100 4=3W160 5=3WA 6=SC1 7=DEC_DMT 8=DEC_Direct",
  "//Comment4": "// Wallbox/Jukebox values AMI 9=W40 10=W80 11=W120 12=W200",
  "//Comment5": "// Wallbox/Jukebox values Rockola 13=1504 14=1544 15=1555 16=1558",
  "//Comment6": "// Wallbox/Jukebox values Wurlitzer 17=5207 18=5210 19=5220 20=5225 21=5250",
  "//Comment7": "// Wallbox/Jukebox values 22=Wireless, 23=Spotify",
  "//Comment8": "// AutoPlay 0=no 1=3s 2=60s 3=5min 4=60min",
  "//Comment9": "// Volume [0...24], Equalizer 0=Flat 1=Pop 2=Rock 4=Classic 5=Bass",
  "//Comment10": "// Control_Relay 0=None 1=JBCancel 2=WBCoin 3=WBCredit, 4=WBSselect 5=ON-OFF"
}
```

Notes on the configuration file:

- ✓ Wallbox_in is your wallbox type (see list of compatible devices in the comments).
- ✓ If you want the WallboxPlayer to startup using SD MP3 songs, the **"Player_out"** or **"Jukebox_out"** (depending on release) should be set to 1 (is MP3_player). If you want the player to start using Spotify, set the configuration to 23 (Spotify).
- ✓ The playlist is a 22 character string taken from the URL (e.g. **"37i9dQZF1DX7KoFHqG7h6i"** from below <https://open.spotify.com/playlist/37i9dQZF1DX7KoFHqG7h6i?si=32c019f715144d00>). Please ensure your playlist **has at least 200 songs** (in this SW version).
- ✓ Use **This_device_ip** to use a **STATIC address** that can be easily found and accessed on your home network (e.g. 192.168.1.216). If left "", a dynamic address will be selected by your router (look for Espressif devices). Receiver name and IP do not need to be filled in. If the static IP is successfully assigned, this will be shown in the display, and this IP can be bookmarked on PC or Smartphone to easily access.

Reinsert the SD card with the configuration file and start the WallboxPlayer (you can have safety copies for yourself on the SD if you want, only **CONFIG.JSON** is read).

2.3 Starting the WallboxPlayer

After connections have been made, powering up should show screen startup messages with release version and wallbox type. **First make sure your Spotify is started and available on** your selected audio device. Following is displayed after startup...

- ❖ Reading configuration on 2ND SD card
- ❖ MP3-player check with number of music files on MP3 song SD
- ❖ Connecting WiFi with SSID
- ❖ Spotify Starting with IP address as connected to WiFi
- ❖ Spotify playing device name
- ❖ Spotify status, Spotify playing (or not), number of Spotify devices



After this, depending on the output device selected either “Select Song” or “Select > Spotify” is shown.

2.4 Setup with onboard button

The onboard ‘select’ (cancel/add/setup) button to perform setup serves two functions, its primary function is to cancel the currently playing song or add a song when nothing is playing. The secondary function of this button is used within the setup menu which follows. The setup menu is accessed by pressing the ‘select’ button **for 5 seconds**. After the instruction, which will be displayed for a few seconds, subsequent settings will be shown to be modified. Pressing the button will change the value of the item, waiting will show the next configuration item.

The setup menu allows you to configure the following settings:

Tools: This menu choice will allow system updates, reset values, restart and a measure/listen utility mode. “**RESTART**” will restart the device. Note that MP3-player will keep playing until early in the startup process. Selecting “**DEFAULTS**” will set values of settings back to factory defaults. Choices: **NO**, **RESTART**, **DEFAULTS**, **UPDATERMODE**, **LISTEN**, **SPOTIFYSETUP**.

Wallbox In: This will configure what input signal is detected by the board, the type of wallbox the board is connected to. Compatible choices: **NONE**, **MP3**, **Sb_3W1**, **Sb_3W100**, **Sb_3W160**, **Sb_3WA**, **Sb_SC1**, **Sb_DEC**, **Sb_DEC-direct**, **Ami_W40**, **Ami_W80**, **Ami_W120**, **Ami_W200**, **Roc_1544**, **Roc_1555**, **Roc_1558**, **Wur_5207**, **Wur_5210**, **Wur_5220**, **Wur_5225**, **Wur_5250**, **WiFiControl**, **Spotify**

Jukebox Out: for WallboxPlayer mode and audio output, this must be **either 1 (for MP3)** or for **Spotify 23**, and settings are correctly entered in the config, songs will be played on the linked Spotify account/device.

AutoPlay: This value sets the time in seconds until a random song is added to the queue. Selecting 0 will disable this function. Setting it to 60 will add song after one minute of idle time. Choices: **0**, **15**, **60**, **300**, **3600**.

Volume: This will determine the output volume of the MP3 player (jack output and speakers). It can be adjusted from 0 to 24. Choices: **0...24**.

Equalizer: This will select the available MP3 equalizer setting (jack output and speakers).

AutoPlay_number: If you select this number with the buttons, (1=A1 etc.), it will select autoplay and play random songs until selected again. (**0**, **1 ... 159**, **160**, **200** (default is 0). Suggested is the highest number selectable (**100** or **160** or **200**).

Control_mode: determines the function of the additional on-board relay: **NONE**, **JBCANCEL**, **WBCOIN**, **WBCREDIT**, **SELECT**, **ON-OFF** (default is **ON-OFF**).

3 PLAYING MUSIC ON SPOTIFY OR MP3 SD-CARD

The following features are available for SD card MP3 player **as well as Spotify**.

- Songs can be selected on the wallbox, play will start after selection or when a song is playing, song will be added to the queue (the WallboxPlayer will keep track of the queue).
- ! Note that during regular WiFi communication with Spotify, keys are not monitored (blue ‘select’ led will be off).
- If a song is playing, the ‘select’ button will cancel the song (and play next in queue)
- If no song is playing, pressing the ‘select’ button will add a random song to the queue
- After choosing the AutoPlay number/selection (as set in the setup, e.g. 100, 160, 200), random songs will automatically be added and played (the MP3 player will select any song from the SD card; **Spotify any of 200 from a playlist**), select the AutoPlay number selection again to switch off the function

3.1 Songs on the music SD card



The MP3 files are stored on a micro-SD card. Ensure the card is clicked in. The microSD card must be formatted as FAT32 (max 32GB)! The number of (.MP3) files can be as many selections as the wallbox can select. The best place for the MP3 files is in the root folder of the card. When copying files from the PC onto the SD card, Windows can hustle the order that then does not match the file/selections. A foolproof way to get the numbering and order right is as follows:

- Format the SD card
- Copy files from computer to SD with drag and drop, one at a time starting with the first one
- Wait until each file is copied, then copy the next (every time just one at a time)

This way, windows will not change the order as every file can only be added and has a later timestamp than the previous one. There is a second microSD (FAT32) slot for configuration settings and songname information.

Some configurations have a second SD card, this will store song titles that are displayed on the display (and web browser). A file **SONGS.TXT** with titles for each song will then be used. See WallboxPlayer manual.

3.2 Songs on Spotify (Playlist)

Ensure the correct **Playlist** (not album) reference is in the config file.

- If Spotify is already playing a song, it is shown (including progress) in the display of the WallboxPlayer.
- If the song is selected by the wallbox, it has a reference number (e.g. #K3 or #179), otherwise this label will be empty.
- If Spotify is connected and selectable (display shows "Song > Spotify"), a selection can be made. Pressing "Cancel" (on Wallbox button or in the App) will cancel current Spotify play.
- When selecting (with Wallbox pushbuttons or with App keypad), the selected song will be added to the queue. If no song is playing or the previous song finished, the next song in the queue will be played.
- When selecting **AutoPlay** number (as defined in setup, e.g. A1, K0, V8, V0 or 280), AutoPlay Random will start and stop.
- When switching from player by selecting "S" in the App, the current device will be stopped, control given to the other player device (MP3 or Spotify), and operation can continue by selecting songs.
- The default start device can be configured in the **CONFIG.JSON** file (Jukebox_out/Player_out; 1=MP3_player, 23=Spotify).



4 THE WEB APP

Open a web browser on your PC or smartphone to the static address set in the configuration file. If the setting is left "", the WallboxPlayer will find a dynamic address.


With the APP, you can now control the player and with the status of the player, and the song being played is shown. Refresh is done regularly.

Display:

- ❖ **Line1:** the status line, added songs, queue
- ❖ **Line2:** shows currently playing song

Buttons:

- ❖ **Add:** adds a random song to the queue
- ❖ **Cancel:** cancel current song and if there is a song in the queue (or AutoPlay) play next song
- ❖ **On/Off:** control extra onboard relay
- ❖ **Eq:** toggle MP3 player equalizer between 5 different settings (not for Spotify)
- ❖ **Mute:** Mute and unmute
- ❖ **Vol- and Vol+:** Decrease and increase volume
- ❖ **Switch player:** from onboard MP3 to Spotify
- ❖ **Number and Letter keys:** Select a song and add to queue. If AutoPlay number is selected, AutoPlay will start/stop.

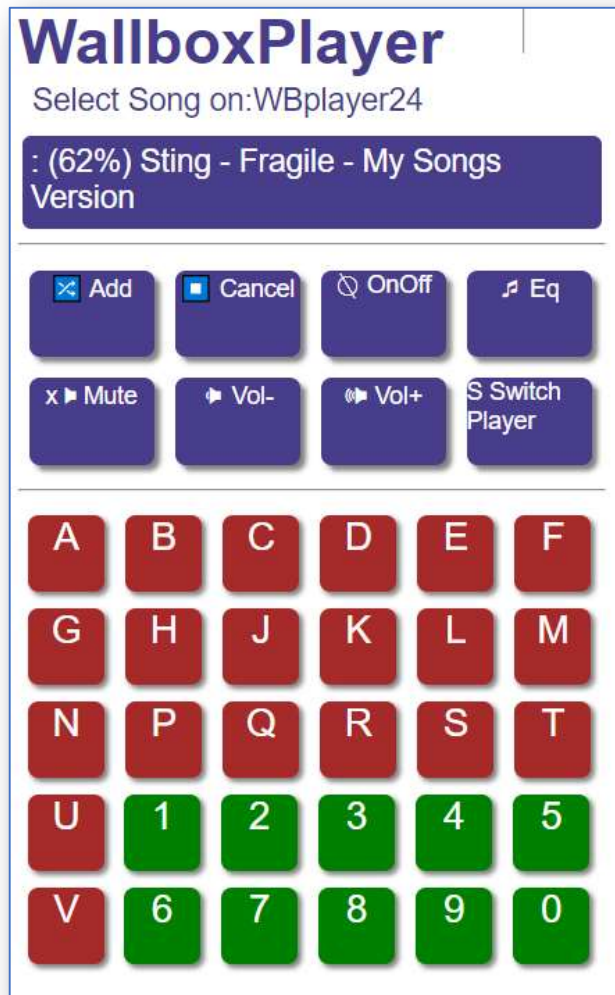

Please contact me in case of questions or inquiries or items not described here.

Joop van den Heuvel

Sint-Oedenrode, The Netherlands

www.wallboxplayer.com

jhmheuvel1@gmail.com

Joopheuvel on Jukebox Addicts Board