



WallboxPlayer – Manual

www.wallboxplayer.com

Jun 2025

The **WallboxPlayer** is a device that turns a wallbox or vintage telephone into a music player. This manual provides basic instructions on how to set up and operate the WallboxPlayer. For installation instructions, refer to the specific manual on the website.

WallboxPlayer features:

- Select songs on your wallbox to play your music with or without a jukebox
- Song queue and/or random play (random up to 999)
- Audio (3.5mm jack) output. Speaker or Bluetooth outputs (option)



The **WallboxPlayer** supports a range of pulse-controlled wallboxes, the Seeburg DEC and some telephones. Power to the player is provided from the wallbox or a 5V adapter, reducing the need for an extra power supply. Music is stored on a microSD card and can be filled matching the wallbox titles. The **MP3 SD card slot** can be found on the top left under the MP3 player; contacts should be on your side and visible before inserting. The MP3 files are stored on a micro-SD card (FAT32). Ensure the card is clicked in. For information on formatting and listing, see below in this document.

POWER UP: the screen will show startup messages with the release version and number of MP3/WAV files on card. After a few seconds the system will light the green LED. If the control relay is set up to enable the lightbulb, the blue led will also be on, showing that selection can be made. When during startup, the music files cannot be read, the status LED will blink twice, and the red MP3 player LED will not be on.



SETUP: The onboard and extra mounted 'select/cancel/setup' button serves two functions. Its primary function is to cancel the currently playing song or add a song when nothing is playing.

The setup menu is accessed by pressing the 'select' button for 5 seconds. After an initial message, subsequent settings will be shown to be modified. Pressing the button will change the value of the item, waiting will show the next configuration item.

Tools: This menu choice will allow system updates, reset values, restart and has other utilities. Selecting "**DEFAULTS**" will set values of settings back to factory defaults. Choices: **NO**, **RESTART**, **DEFAULTS**, **UPDATERMODE**, **LISTEN**.

Wallbox In: This will configure what input signal is detected by the board, the type of wallbox the board is connected to. Compatible choices: **NONE**, **MP3**, **Sb_3W1**, **Sb_3W100**, **Sb_3W160**, **Sb_3WA**, **Sb_SC1**, **Seeburg_DEC**, **Seeb_DEC-direct**, **Ami_W40**, **Ami_W80**, **Ami_W120**, **Ami_W200**, **Roc_1544**, **Roc_1504**, **Roc_1555**, **Roc_1558**, **Wur_5200**, **Wur_5207**, **Wur_5210**, **Wur_5220**, **Wur_5250**, **Dial1**, **Dial2**, **Dial3**, **Matrix**, **Wireless...** and other types depending on release

Volume: This will determine the output volume of the MP3 player (jack output and speakers). It can be adjusted from 0 to 24, suggested is 20-22. Choices: **0...24**.

Equalizer: This will select one of the available equalizers (jack output and speakers), the best choice is BASS or POP. Choices: **FLAT**, **POP**, **ROCK**, **CLASSIC**, **BASS** (and some boost variations)

AutoPlay_number: If selecting this number with the buttons, (1=A1 etc.) autoplay will play random songs until selected again. **0**, **1 ... 159**, **160**, **199**, **200** (default is **0**, off)

PlayMode (exp) R12.6>: prototype function. If enabled **AlbumFolderPlay** will play selected folder /01/ to /98/; /99/ is for extra songs 001.mp3, 002.mp3 etc. **MP3NumberPlay** will play in /MP3/ 0001.MP3 0002.MP3 etc. To turn this off select 'FilePlay'.

Control_mode determines the function of the additional on-board relay: **NONE**, **JBCANCEL**, **WBCOIN**, **WBCREDIT**, **SELECT_LAMP**, **ON-OFF** (default is **NONE**). The "Select_lamp mode" can enable the "Make selection" lamp in the wallbox.

Speed_adjust_hz (optional, only for UWB): United wallboxes determine selection with distance between pulses. This setting tunes it for 50Hz or 60Hz or in case motors are slower or faster. **Default 50 (Hz)**.

Note: For some earlier player versions, more settings were possible. It is suggested to leave them on the default. Jukebox Out must be on MP3. For other selections, it will send out a pulse to a connected jukebox. Other advanced settings can be changed with an SD card in the optional data SD card slot (right of the display).

Pairing Bluetooth (option): When paired and connected, the red BT board-LED blinks twice at ~5 sec interval. When idle and unpaired the red LED flashes slowly (~1sec interval). Short-Press the button for unpairing. To pair with a Bluetooth device, ensure it is not paired (with other device), put the Bluetooth speaker in pairing mode and press (2sec) the pair button, the red LED will blink slowly (at ~2sec interval) and start pairing. For more information look at the KCX BT module documentation.

DOWNLOADING MP3's: You can use YouTube to find a song, copy URL with right click and past in a mp3 converter (e.g. <https://ytmp3.la/en-yMP0/>) or MediaHuman YouTube converter. Download and then copy onto microSD card (see below).



PLAY SONGS: The WallboxPlayer in the wallbox (or an enclosure) has the following functions available

- Press the “Select/Cancel/Setup” button on the board or the connected button mounted in the wallbox to test if (random) song will start. Press again to cancel. For some phones, raising the hook will also have this function.
- Make selection on the Wallbox with the wallbox buttons or select using the dial (on the phone). Pulses will be sent to the WallboxPlayer. The selected song will start.
- Songs can be selected on the wallbox, play will start after selection or when a song is playing, song will be added to the queue (up to 20 songs in a queue).
- If an MP3 song is playing, the ‘select’ button will cancel the song (and play next in queue)
- If no song is playing, pressing the ‘select’ button will add a random song to the queue.
- **AutoPlay:** Pressing the select button longer (1-2sec) will start and stop AutoPlay. Random songs will automatically be added and played (even MP3’s on the SD beyond the selection limit of 160 or 200 – see further below), press button 2 seconds again to switch off the function
- If enabled, **AutoPlay** can also be started and stopped with wallbox buttons defined by the AutoPlay number in the setup (e.g. **160selects: 1 for A1 or 160 for U8, DEC: #100 or 279, 200selects: 1 for A1 or 200 for V0 – depending on wallbox**). Can also be set e.g. to 000 or 001 for Dial systems,
- For the new **AlbumPlay** mode (proto), selections will play folder /XX/ and extra songs in folder /99/. When playing, short-press will skip to next song, long-press will cancel current album-play.



SONGS ORDER: (Re)loading songs, playing more than selectable, and making listing

The MP3 (or WAV) files are stored on a micro-SD card. Ensure the card is clicked in. The microSD card must be formatted as FAT32 (max 8GB - some 32GB cards cannot be read)! The number of music files can be as many selections as the wallbox selects. Put the files in the card root folder. When copying files from the PC onto the SD card, **Windows** hustles the order that then does not match the file/selections. On **Apple-Mac**, specifically select the order you want (e.g. alphabetical). A foolproof way to get the numbering and ordering right is as follows:

- Format the SD card
- Copy files from computer to SD, one at a time starting with the first one
- Wait until each file is copied, then copy the next (every time just one at a time)

This way, windows will not change the order as every file can only be added and has a later timestamp than the previous one. The best way to get a matching listing of the order of the songs on the music SD, use DOS command (run **CMD** after clicking magnifying-glass search icon and **CD** to your SD card): then **DIR /B /A: -D *.MP3 > SONGS.TXT**. This will create a file that you can read and use for song titles.



```
F:\>DIR /B /A: -D *.MP3 > SONGS.TXT
F:\>type songs.txt
Louis Armstrong - What A Wonderful World.mp3
Elvis Presley - Jailhouse Rock.mp3
Chuck Berry - Roll Over Beethoven.mp3
Tom Jones - It's Not Unusual.mp3
Beatles - Yesterday.mp3
Bill Withers - Ain't No Sunshine.mp3
Beatles - Eleanor Rigby.mp3
James Brown - It's A Man's Man's World.mp3
Charles Aznavour - She.mp3
Frank Sinatra & Count Basie - Fly Me To The Moon.mp3
```


A feature of the WallboxPlayer is playing songs that go beyond the selectable numbers. This is great for random play. Simply create an extra folder (after having put the selectable songs on the music SD) and simply fill it with the songs you want to hear in random play mode. In below, the folder “extra songs” contains songs.

Name	Status	#	Title
Extra songs			
Elvis Presley - Jailhouse Rock.mp3		380	Jailhouse Rock
Chuck Berry - Roll Over Beethoven.mp3		1965	Roll Over Beethoven
Tom Jones - It's Not Unusual.mp3		2066	It's Not Unusual
Beatles - Yesterday.mp3		18	Yesterday
Bill Withers - Ain't No Sunshine.mp3		654	Ain't No Sunshine
Beatles - Eleanor Rigby.mp3		236	Eleanor Rigby

CREATE SONGTITLES: WallboxPlayers with data SD slot option (software V11 and up):

Configurations that have a data SD card (right of the display), enable creation and use of song labels and displays song filenames (and web browser). For labels and the display, song information from filename will be generated. Once this is done, the data SD card can be removed and settings remembered.

- To generate these files, insert the MUSIC SD (with mp3's) in the data SD slot and (re)start the device. Files **SONGS.TXT**, **PRINT.HTML** and **LABELS.HTML** are generated in folder /labels/. These can be used to help make song listings and labels (open with computer). Files can be simply edited/corrected by clicking and editing, before printing. After generating files, insert music SD into the blue player SD slot again.
- To generate a custom listing or for album mode play, the file SONGS.TXT (with a song- or album-name on each line, sequential) on the data SD card in /labels/ (/labels/SONGS.TXT) will determine the labels shown on the display.

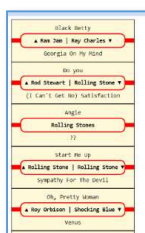

More information can be found on the website www.wallboxplayer.com.